CATERPILLAR

Operation and Maintenance Manual

432F BACKHOE LOADER

S/N PXR00001-UP

Tip; Use Bookmarks panel to navigate

Printed by Heavy Equipment Manuals **Printed in U.S.A**
v2.20

Heavy Equipment Manuals

Foreword 2
Maintenance Section 6
Operation Section 224
Product Information Section 399
Reference Information Section 487
Safety Section 500
Warranty Section 570

Product: BACKHOE LOADER
Model: 432F BACKHOE LOADER PXR
Configuration: 432F Backhoe Loader Side Shift PXR00001-UP (MACHINE) POWERED BY C4.4 Engine

Operation and Maintenance Manual
428F, 432F, 434F and 444F Backhoe Loaders
Media Number -SEBU8716-03 **Publication Date -01/10/2013** **Date Updated -09/10/2013**

s00037320

Foreword

Literature Information

This manual should be stored in the operator's compartment in the literature holder or seat back literature storage area.

This manual contains safety information, operation instructions, transportation information, lubrication information and maintenance information.

Some photographs or illustrations in this publication show details or attachments that can be different from your machine. Guards and covers might have been removed for illustrative purposes.

Continuing improvement and advancement of product design might have caused changes to your machine which are not included in this publication. Read, study and keep this manual with the machine.

Whenever a question arises regarding your machine, or this publication, please consult your Cat dealer for the latest available information.

Safety

The safety section lists basic safety precautions. In addition, this section identifies the text and locations of warning signs and labels used on the machine.

Read and understand the basic precautions listed in the safety section before operating or performing lubrication, maintenance and repair on this machine.

Operation

The operation section is a reference for the new operator and a refresher for the experienced operator. This section includes a discussion of gauges, switches, machine controls, attachment controls, transportation and towing information.

Photographs and illustrations guide the operator through correct procedures of checking, starting, operating and stopping the machine.

Operating techniques outlined in this publication are basic. Skill and techniques develop as the operator gains knowledge of the machine and its capabilities.

Maintenance

The maintenance section is a guide to equipment care. The Maintenance Interval Schedule (MIS) lists the items to be maintained at a specific service interval. Items without specific intervals are listed under the "When Required" service interval. The Maintenance Interval Schedule lists the page number for the step-by-step instructions required to accomplish the scheduled maintenance. Use the Maintenance Interval Schedule as an index or "one safe source" for all maintenance procedures.

Maintenance Intervals

Use the service hour meter to determine servicing intervals. Calendar intervals shown (daily, weekly, monthly, etc.) can be used instead of service hour meter intervals if they provide more convenient servicing schedules and approximate the indicated service hour meter reading. Recommended service should always be performed at the interval that occurs first.

Under extremely severe, dusty or wet operating conditions, more frequent lubrication than is specified in the maintenance intervals chart might be necessary.

Perform service on items at multiples of the original requirement. For example, at every 500 service hours or 3 months, also service those items listed under every 250 service hours or monthly and every 10 service hours or daily.

California Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

Battery posts, terminals and related accessories contain lead and lead compounds. **Wash hands after handling.**

Certified Engine Maintenance

Proper maintenance and repair is essential to keep the engine and machine systems operating correctly. As the heavy duty off-road diesel engine owner, you are responsible for the performance of the required maintenance listed in the Owner Manual, Operation and Maintenance Manual, and Service Manual.

It is prohibited for any person engaged in the business of repairing, servicing, selling, leasing, or trading engines or machines to remove, alter, or render inoperative any emission related device or element of design installed on or in an engine or machine that is in compliance with the regulations (40 CFR Part 89). Certain elements of the machine and engine such as the exhaust system, fuel system, electrical system, intake air system and cooling system may be emission related and should not be altered unless approved by Caterpillar.

Machine Capacity

Additional attachments or modifications may exceed machine design capacity which can adversely affect performance characteristics. Included would be stability and system certifications such as brakes, steering, and rollover protective structures (ROPS). Contact your Cat dealer for further information.

Cat Product Identification Number

Effective First Quarter 2001 the Cat Product Identification Number (PIN) has changed from 8 to 17 characters. In an effort to provide uniform equipment identification, Caterpillar and other construction equipment manufacturers are moving to comply with the latest version of the product identification numbering standard. Non-road machine PINs are defined by ISO 10261. The new PIN format will apply to all Cat machines and generator sets. The PIN plates and frame marking will display the 17 character PIN. The new format will look like the following:

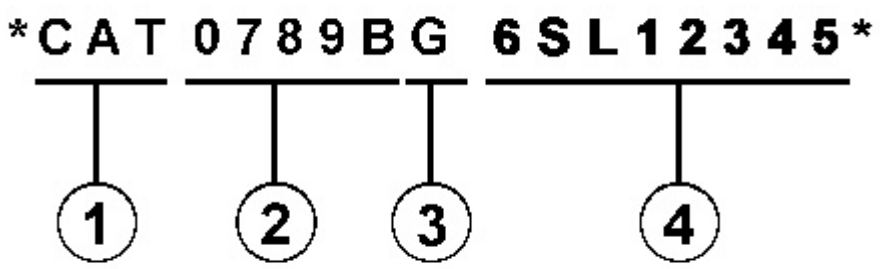

Illustration 1 g00751314

Where:

1. Caterpillar's World Manufacturing Code (characters 1-3)

2. Machine Descriptor (characters 4-8)

3. Check Character (character 9)

4. Machine Indicator Section (MIS) or Product Sequence Number (characters 10-17). These were previously referred to as the Serial Number.

This is the sample of the manual

Click on the download link for complete manual

Download Link

Machines and generator sets produced before First Quarter 2001 will maintain their 8 character PIN format.

Components such as engines, transmissions, axles, etc. and work tools will continue to use an 8 character Serial Number (S/N).

Copyright 1993 - 2022 Caterpillar Inc.
All Rights Reserved.
Private Network For SIS Licensees.

Axle Breathers - CleanReplace 4
Backhoe Boom, Stick, Bucket, and Cylinder Bearings - Lubricate 6
Backhoe Control Console Latch - Lubricate 9
Backup Alarm - Test 12
Battery - Recycle 13
Battery or Battery Cable - InspectReplace 14
Belts - InspectAdjustReplace 15
Braking System - Test 18
Bucket Cutting Edges - InspectReplace 21
Bucket Tips - InspectReplace 23
Cab Filter (Fresh Air) - CleanInspectReplace 25
Cab Filter (Recirculation) - CleanInspectReplace 28
Cab Interior - Clean 30
Capacities (Refill) 31
Cooling System Coolant (ELC) - Change 33
Cooling System Coolant Level - Check 37
Cooling System Coolant Sample (Level 1) - Obtain 39
Cooling System Coolant Sample (Level 2) - Obtain 42
Cooling System Water Temperature Regulator - CleanReplace 44
Diesel Particulate Filter - Clean 46
Differential Oil (Front) - Change 47
Differential Oil (Rear) - Change 49
Differential Oil Level (Front) - Check 51
Differential Oil Level (Rear) - Check 53
Differential Oil Sample (Front) - Obtain 55
Differential Oil Sample (Rear) - Obtain 57
Drive Shaft Spline - Lubricate 59
Engine Air Filter Primary Element - Replace 61
Engine Air Filter Secondary Element - Replace 63
Engine Air Precleaner - Clean 66

Engine Compartment - Clean 68
Engine Crankcase Breather - Replace 69
Engine Oil and Filter - Change 72
Engine Oil Level - Check 75
Engine Oil Sample - Obtain 77
Engine Valve Lash - Check 79
Extendable Stick Pads - InspectAdjust 80
Film (Product Identification) - Clean 82
Final Drive Oil (Front) - Change 85
Final Drive Oil (Rear) - Change 87
Final Drive Oil Level (Front) - Check 90
Final Drive Oil Level (Rear) - Check 92
Final Drive Oil Sample (Front) - Obtain 94
Final Drive Oil Sample (Rear) - Obtain 95
Fuel System - Prime 96
Fuel System Primary Filter (Water Separator) - Replace 99
Fuel System Secondary Filter - Replace 102
Fuel System Water Separator - Drain 105
Fuel Tank Water and Sediment - Drain 107
Fuses - Replace 110
Hydraulic Oil Sample - Obtain 116
Hydraulic System Oil - Change 118
Hydraulic System Oil Filter - Replace 122
Hydraulic System Oil Level - Check 125
Lift Cylinder Brace - Connect and Disconnect 127
Loader Bucket, Cylinder, and Linkage Bearings - Lubricate 132
Lubricant Viscosities - Fluids Recommendations 137
Maintenance Interval Schedule 145
Oil Filter - Inspect 149
Parking Brake - CheckAdjust 151

Power Sideshift Stabilizer Wear Pads - Inspect - If Equipped ____ 154
Quick Coupler - Clean ____ 155
Quick Coupler - Lubricate - Hydraulic Pin Grabber Quick Coupler (If Equipped) ____ 157
Quick Coupler - Lubricate - If Equipped ____ 159
Radiator Core - Clean ____ 162
Receiver Dryer (Refrigerant) - Replace ____ 164
Rollover Protective Structure (ROPS) - Inspect ____ 166
S·O·S Information ____ 168
Seat Belt - Inspect ____ 169
Seat Belt - Replace ____ 171
Sideshift Stabilizer Wear Pads - InspectAdjust ____ 173
Stabilizer - CleanInspect ____ 176
Swing Frame and Cylinder Bearings - LubricateInspect ____ 177
System Pressure Release ____ 180
Tire Inflation - Check ____ 183
Tire Inflation Pressure Adjustment ____ 184
Tire Inflation with Air ____ 185
Tire Shipping Pressure ____ 187
Transmission Magnetic Screen - Clean ____ 190
Transmission Oil - Change ____ 193
Transmission Oil Filter - Replace ____ 196
Transmission Oil Level - Check ____ 198
Transmission Oil Sample - Obtain ____ 200
Welding on Machines and Engines with Electronic Controls ____ 202
Wheel Bearings (Front) - Lubricate - Two-Wheel Drive ____ 204
Wheel Nut Torque - Check ____ 206
Window Washer Reservoir - Fill ____ 207
Window Wipers - InspectReplace ____ 209
Windows - Clean ____ 210

Product: BACKHOE LOADER
Model: 432F BACKHOE LOADER PXR
Configuration: 432F Backhoe Loader Side Shift PXR00001-UP (MACHINE) POWERED BY C4.4 Engine

Operation and Maintenance Manual
428F, 432F, 434F and 444F Backhoe Loaders
Media Number -SEBU8716-03 **Publication Date -01/10/2013** **Date Updated -09/10/2013**

i02436158

Axle Breathers - Clean/Replace

SMCS - 3278-510-BRE; 3278-070-BRE

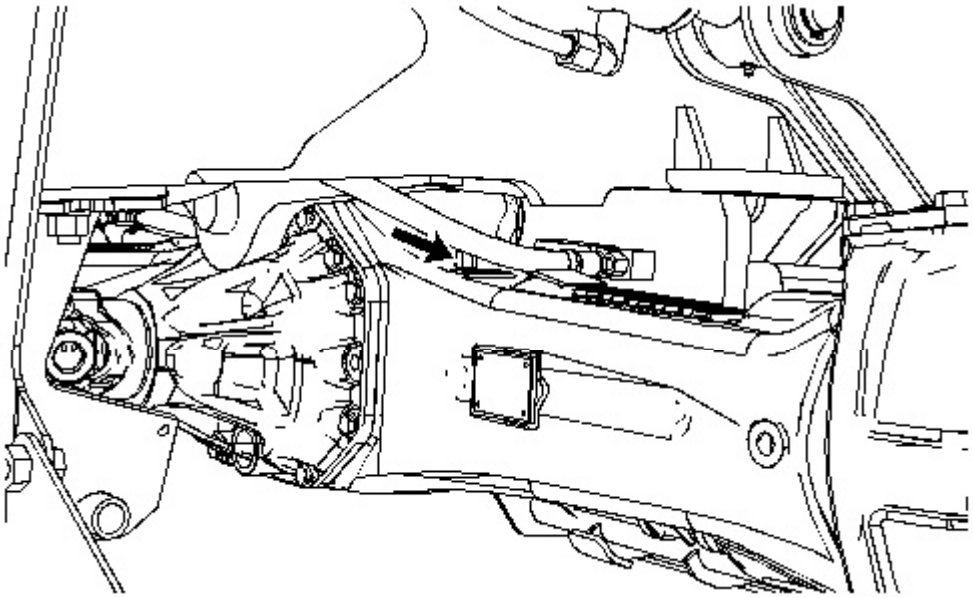

Illustration 1 g01216797

The front axle breather is located on the top right side of the differential housing.

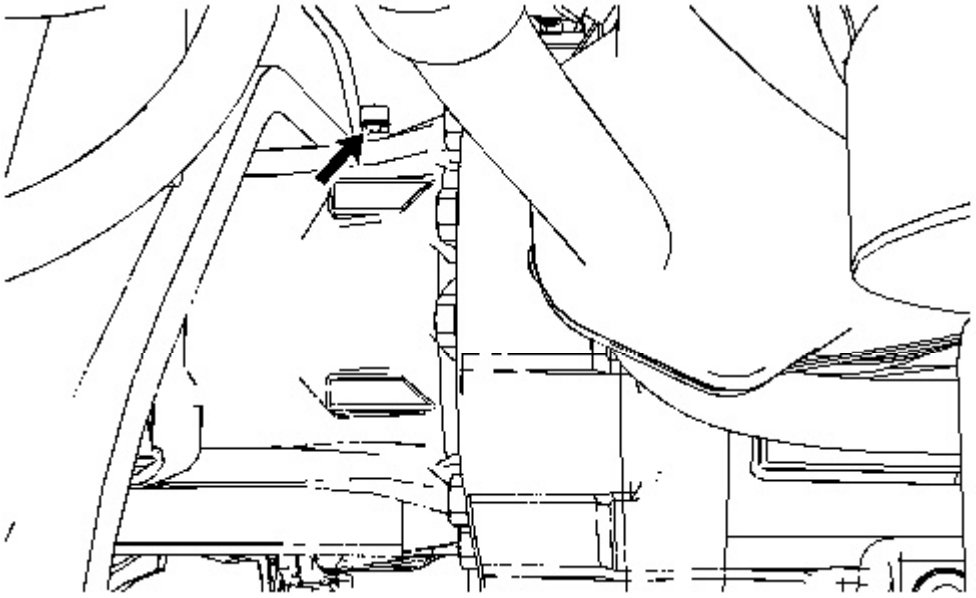

Illustration 2 g01216798

The rear axle breather is located to the left of the differential housing.

1. Clean the area around the breathers. Remove the breather from the front axle.
2. Wash the breather in clean nonflammable solvent. Wipe the breather dry and check the breather for damage.
3. Install the clean breather back into the axle. Replace the breather if the breather is damaged.

   Note: Make sure that the slot in the breather is parallel to the axle housing.

Copyright 1993 - 2022 Caterpillar Inc.
All Rights Reserved.
Private Network For SIS Licensees.

Product: BACKHOE LOADER
Model: 432F BACKHOE LOADER PXR
Configuration: 432F Backhoe Loader Side Shift PXR00001-UP (MACHINE) POWERED BY C4.4 Engine

Operation and Maintenance Manual
428F, 432F, 434F and 444F Backhoe Loaders
Media Number -SEBU8716-03 **Publication Date -01/10/2013** **Date Updated -09/10/2013**

i03612024

Backhoe Boom, Stick, Bucket, and Cylinder Bearings - Lubricate

SMCS - 6501-086-BD; 6502-086-BD; 6503-086-BD; 6511-086-BD; 6512-086-BD; 6533-086-BD; 7562-086-BD

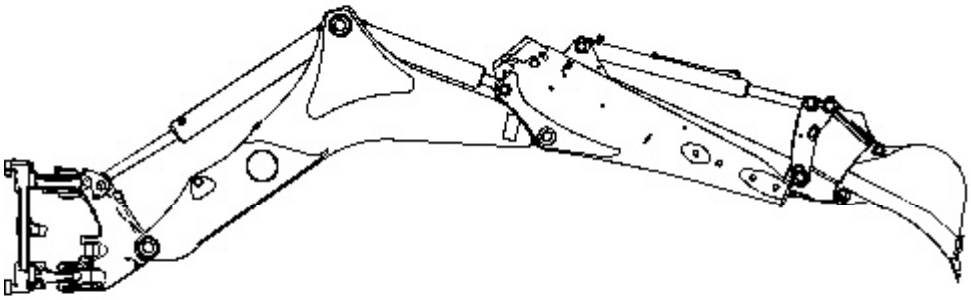

Illustration 1 g01936699

Position the backhoe into the service position that is shown above. Lower the bucket to the ground. Relieve the hydraulic pressure and remove the load from the greased joints.

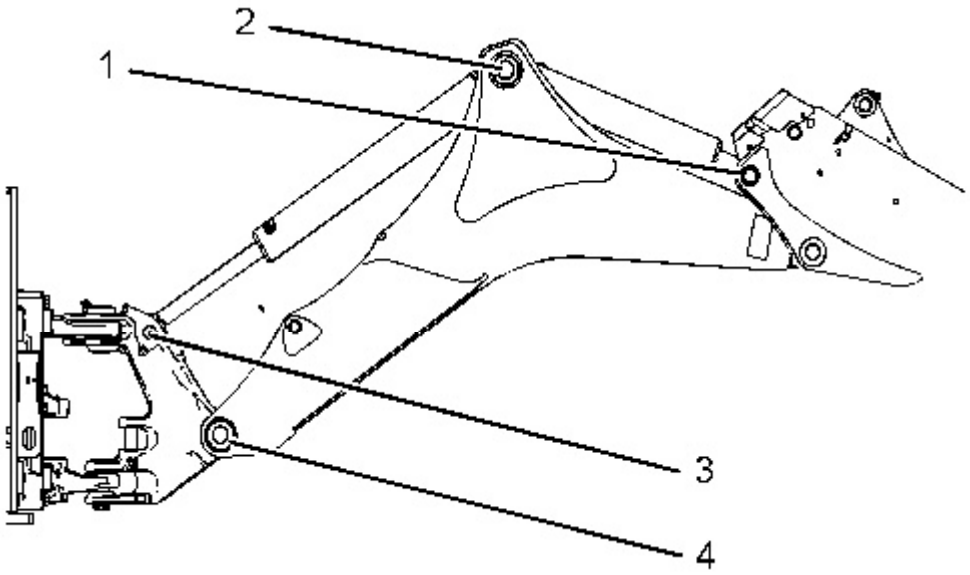

Illustration 2 g01936701

Apply lubricant to the grease fitting (1) for the rod end of the stick cylinder.

Apply lubricant to the grease fitting (2) for the head end of the boom cylinder and the head end of the stick cylinder.

Apply lubricant to the grease fitting (3) for the rod end of the boom cylinder.

Apply lubricant to the grease fitting (4) for the boom pivot. There is one grease fitting on each side of the machine.

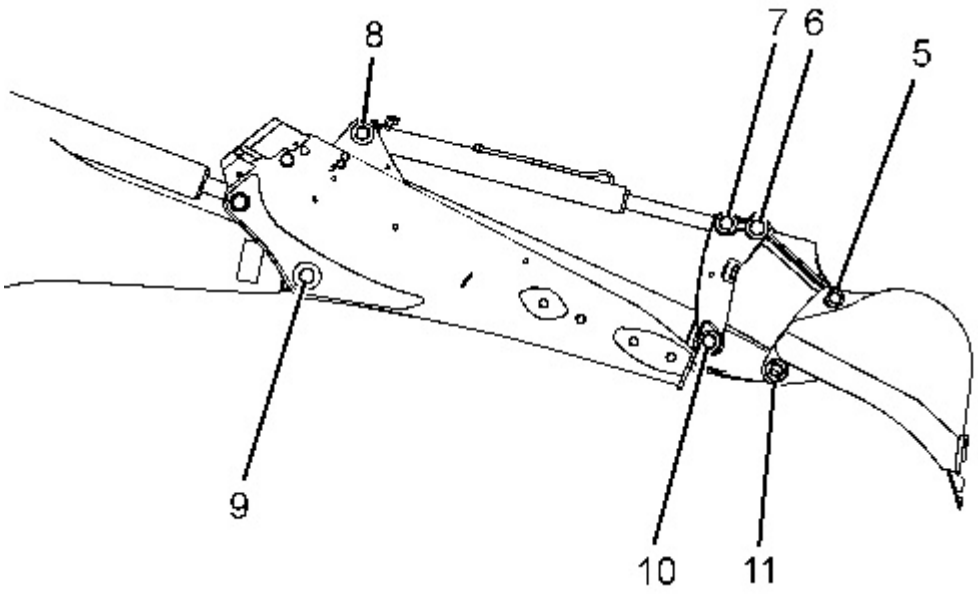

Illustration 3 g01936702

Apply lubricant to the grease fitting (5) for the bucket pivot pin.

Apply lubricant to the grease fitting (6) for the link.

Apply lubricant to the grease fitting (7) for the rod end of the bucket cylinder.

Apply lubricant to the grease fitting (8) for the head end of the bucket cylinder.

Apply lubricant to the grease fitting (9) for the pivot pin for the stick.

Apply lubricant to the grease fitting (10) for the pivot pin. There is one grease fitting on each side of the machine.

Apply lubricant to the grease fitting (11) for the pivot pin.

There is a total of 17 grease fittings.

Copyright 1993 - 2022 Caterpillar Inc.
All Rights Reserved.
Private Network For SIS Licensees.
Tue Dec 27 11:06:26 UTC+0530 2022

Product: BACKHOE LOADER
Model: 432F BACKHOE LOADER PXR
Configuration: 432F Backhoe Loader Side Shift PXR00001-UP (MACHINE) POWERED BY C4.4 Engine

Operation and Maintenance Manual
428F, 432F, 434F and 444F Backhoe Loaders
Media Number -SEBU8716-03 **Publication Date -01/10/2013** **Date Updated -09/10/2013**

i02915316

Backhoe Control Console Latch - Lubricate

SMCS - 5258-086-LX

S/N - JXR1-UP

S/N - PXR1-UP

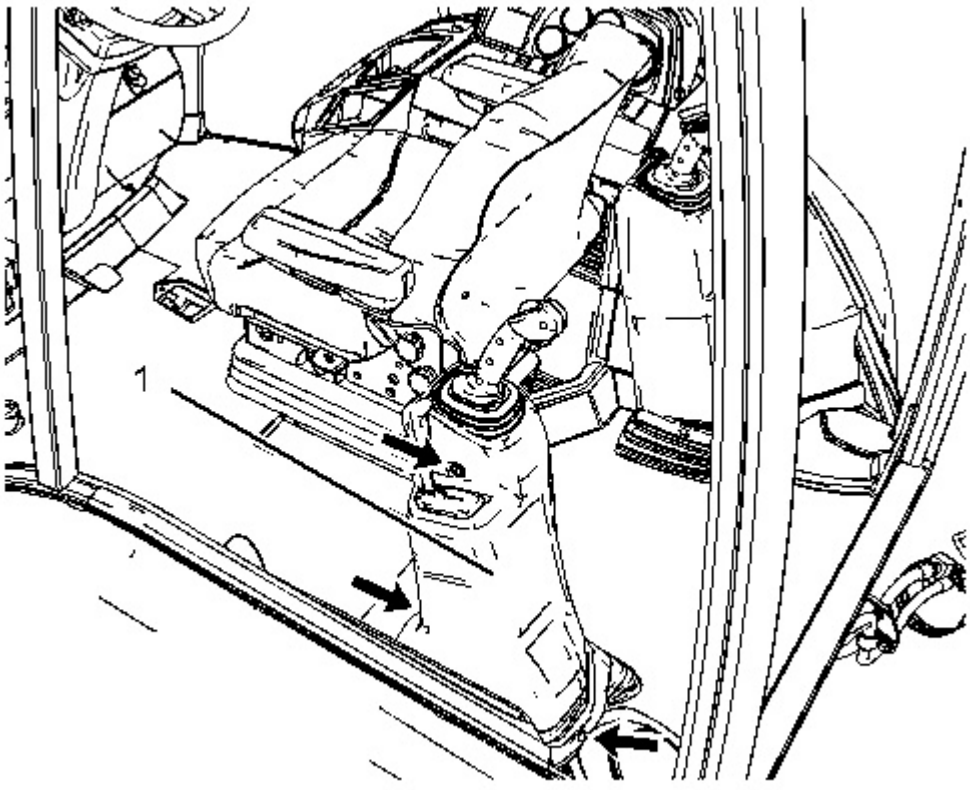

Illustration 1 g01450004

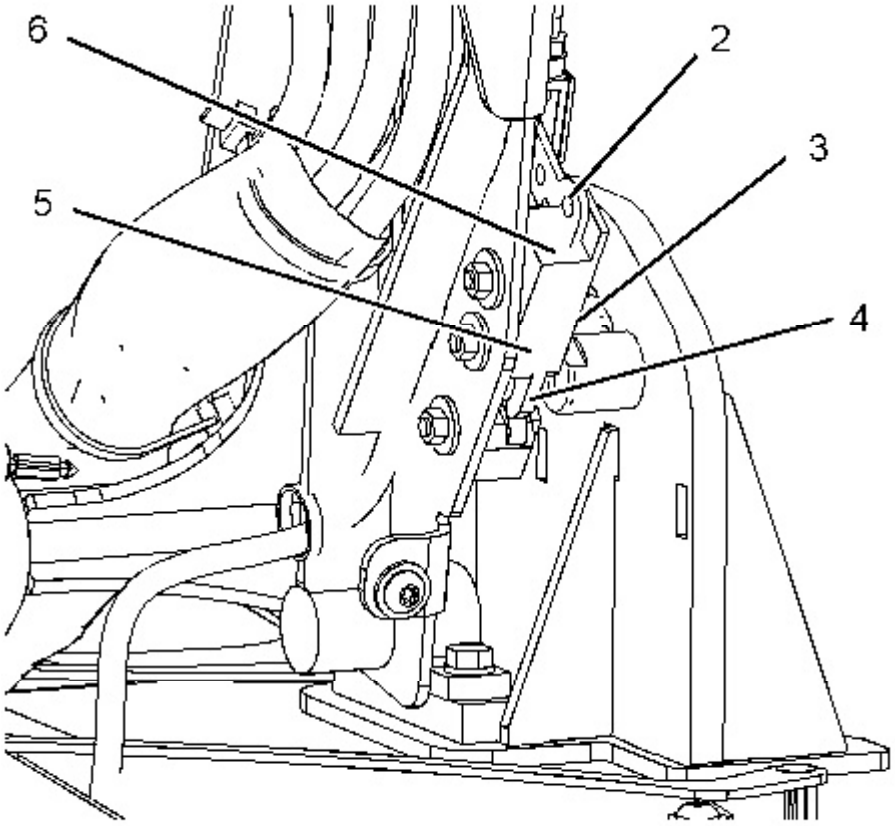

Illustration 2 g01450005

1. Remove the three bolts and remove the console (1).
2. Place the latch in the closed position.
3. Apply **242-6990** Lubricant onto the following:
    - Pivot for the release lever (2)
    - Axle for the catch (3)
    - Rotor axle (4)
    - Notches and catch for the rotor (5)
    - Contact for the release lever (6)
4. Cycle the latch two times.
5. Repeat steps 1 through 4.

Copyright 1993 - 2022 Caterpillar Inc.
All Rights Reserved.
Private Network For SIS Licensees.

Tue Dec 27 11:06:37 UTC+0530 2022

Product: BACKHOE LOADER
Model: 432F BACKHOE LOADER PXR
Configuration: 432F Backhoe Loader Side Shift PXR00001-UP (MACHINE) POWERED BY C4.4 Engine

Operation and Maintenance Manual
428F, 432F, 434F and 444F Backhoe Loaders
Media Number -SEBU8716-03 **Publication Date -01/10/2013** **Date Updated -09/10/2013**

i00080741

Backup Alarm - Test

SMCS - 7406-081

Turn the engine start switch key to ON in order to perform the test.

Apply the service brake. Move the transmission direction control lever to REVERSE position.

The backup alarm should immediately sound. The backup alarm will continue to sound until the transmission direction control lever is moved to the NEUTRAL position or to the FORWARD position.

Copyright 1993 - 2022 Caterpillar Inc.
All Rights Reserved.
Private Network For SIS Licensees.

Tue Dec 27 11:06:54 UTC+0530 2022

Product: BACKHOE LOADER
Model: 432F BACKHOE LOADER PXR
Configuration: 432F Backhoe Loader Side Shift PXR00001-UP (MACHINE) POWERED BY C4.4 Engine

Operation and Maintenance Manual
428F, 432F, 434F and 444F Backhoe Loaders
Media Number -SEBU8716-03 **Publication Date -01/10/2013** **Date Updated -09/10/2013**

i06543763

Battery - Recycle

SMCS - 1401-561

Always recycle a battery. Never discard a battery.

Always return used batteries to one of the following locations:

- A battery supplier
- An authorized battery collection facility
- Recycling facility

Copyright 1993 - 2022 Caterpillar Inc.
All Rights Reserved.
Private Network For SIS Licensees.

Tue Dec 27 11:07:11 UTC+0530 2022

Product: BACKHOE LOADER
Model: 432F BACKHOE LOADER PXR
Configuration: 432F Backhoe Loader Side Shift PXR00001-UP (MACHINE) POWERED BY C4.4 Engine

Operation and Maintenance Manual
428F, 432F, 434F and 444F Backhoe Loaders
Media Number -SEBU8716-03 **Publication Date -01/10/2013** **Date Updated -09/10/2013**

i03114985

Battery or Battery Cable - Inspect/Replace

SMCS - 1401-040; 1401-510; 1402-040; 1402-510

1. Turn the engine start switch to the OFF position. Turn all switches to the OFF position.
2. Disconnect the negative battery cable from the frame.

   Note: Do not allow the disconnected battery cable to contact the frame of the machine.
3. Disconnect the negative battery cable at the battery.
4. Inspect the battery terminals and inspect the battery cables. Keep the terminals clean and keep the terminals coated with petroleum jelly.
5. Perform the necessary repairs. Replace the cable or the battery, as needed.
6. Connect the negative battery cable at the battery.
7. Connect the battery cable to the frame of the machine.
8. Install the engine start switch key.

Note: When you inspect the battery also inspect the battery box vents for debris.

Copyright 1993 - 2022 Caterpillar Inc.
All Rights Reserved.
Private Network For SIS Licensees.

Tue Dec 27 11:10:31 UTC+0530 2022

Product: BACKHOE LOADER
Model: 432F BACKHOE LOADER PXR
Configuration: 432F Backhoe Loader Side Shift PXR00001-UP (MACHINE) POWERED BY C4.4 Engine

Operation and Maintenance Manual
428F, 432F, 434F and 444F Backhoe Loaders
Media Number -SEBU8716-03 **Publication Date -01/10/2013** **Date Updated -09/10/2013**

i06896532

Belts - Inspect/Adjust/Replace

SMCS - 1357-025; 1357-040; 1357-510

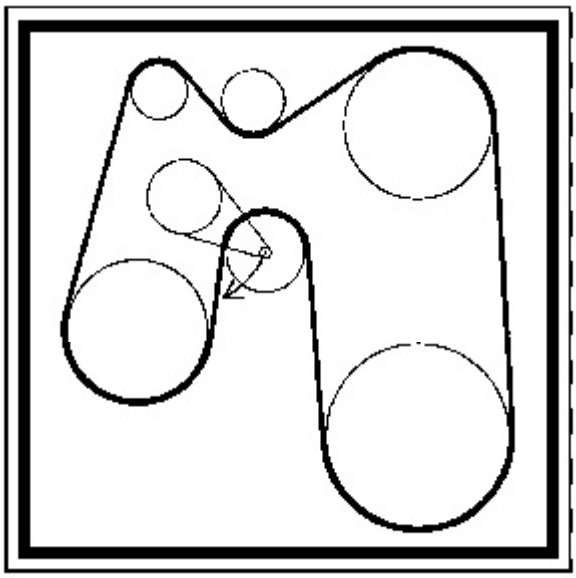

Illustration 1 g03507446
Belt Routing Film: Machines with A/C

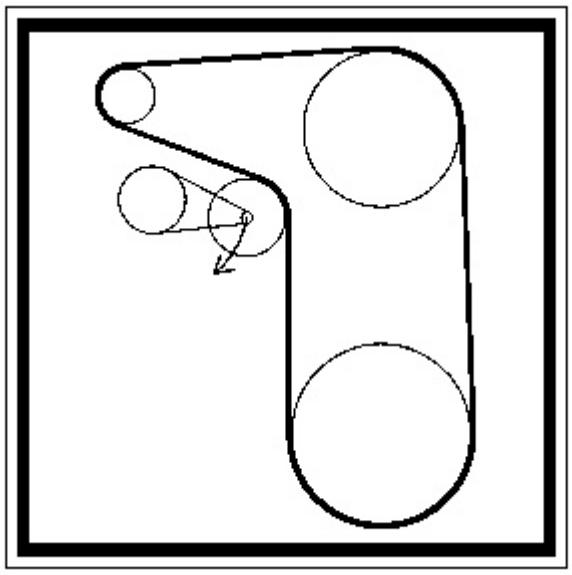

Illustration 2 g03518922

Belt Routing Film: Machines without A/C

If new belts are installed, check belt adjustment after 30 minutes of operation. For multiple belt drive applications, always replace the belts in matched sets. Replacing only one belt of a matched set will cause the new belt to carry more load because the older belts are stretched. The additional load on the new belt could cause the new belt to break.

1. Open the hood.

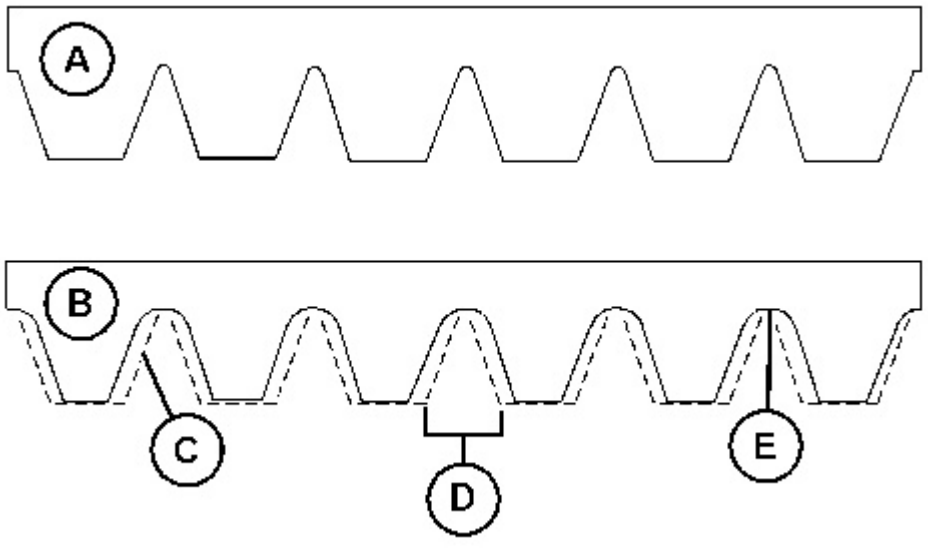

Illustration 3 g06114636

(A) New belt
(B) Worn belt

2. Inspect the condition of the serpentine belt. Over time the belt ribs will lose material (C). The space between the ribs will increase (D). The loss of material will cause the pulley sheave to contact the belt valley. This will lead to belt slippage and accelerated wear (E). Replace the belt if the belt is worn or frayed.

   Note: The serpentine belt is the self-adjusting type. There is no adjustment of the tension.

3. Close the hood.

Copyright 1993 - 2022 Caterpillar Inc.
All Rights Reserved.
Private Network For SIS Licensees.

Product: BACKHOE LOADER
Model: 432F BACKHOE LOADER PXR
Configuration: 432F Backhoe Loader Side Shift PXR00001-UP (MACHINE) POWERED BY C4.4 Engine

Operation and Maintenance Manual
428F, 432F, 434F and 444F Backhoe Loaders
Media Number -SEBU8716-03 **Publication Date -01/10/2013** **Date Updated -09/10/2013**

i04002955

Braking System - Test

SMCS - 4251-081; 4267-081

Service Brake Holding Ability Test

Check the area around the machine. Make sure that the machine is clear of personnel and clear of obstacles.

Test the brakes on a dry, level surface.

Fasten the seat belt before you test the brakes.

The following tests are used to determine if the service brake is functional. These tests are not intended to measure the maximum brake holding effort. The brake holding effort that is required to sustain a machine at a specific engine rpm varies depending on the machine. The variations are the differences in the engine setting, in the power train efficiency, and in the brake holding ability, etc.

1. Start the engine. Raise the bucket slightly.
2. Apply the service brake. Release the parking brake.
3. Move the transmission control lever to THIRD SPEED FORWARD.
4. Gradually increase the engine speed to high idle. The machine should not move.

WARNING

If the machine begins to move, reduce the engine speed immediately and engage the parking brake.

5. Reduce the engine speed to low idle. Move the transmission to NEUTRAL. Engage the parking brake. Lower the bucket to the ground. Stop the engine.

NOTICE

If the machine moved while testing the brakes, contact your Caterpillar dealer. Have the dealer inspect and, if necessary, repair the service brake before returning the machine to operation.

Secondary Brake Holding Ability Test

Check the area around the machine. Make sure that the machine is clear of personnel and clear of obstacles.

Test the brakes on a dry, level surface.

Fasten the seat belt before you test the brakes.

The following tests are used to determine if the parking brake is functional. These tests are not intended to measure the maximum brake holding effort. The brake holding effort that is required to sustain a machine at a specific engine rpm varies depending on the machine. The variations are the differences in the engine setting, in the power train efficiency, and in the brake holding ability, etc.

1. Start the engine. Raise the bucket slightly.
2. Engage the parking brake.
3. Move the transmission control lever to THIRD SPEED FORWARD, then to NEUTRAL, then back to THIRD SPEED FORWARD.

   Note: The parking brake indicator light should come on and the parking brake alarm should sound.
4. Gradually increase the engine speed to high idle. The machine should not move.

WARNING

If the machine begins to move, reduce the engine speed immediately and apply the service brake pedal.

5. Reduce the engine speed. Move the transmission to NEUTRAL. Lower the bucket to the ground. Stop the engine.

NOTICE

If the machine moved while testing the brakes, contact your Caterpillar dealer.

Have the dealer inspect and, if necessary, repair the parking brakes before returning the machine to operation.

Copyright 1993 - 2022 Caterpillar Inc.
All Rights Reserved.
Private Network For SIS Licensees.
Tue Dec 27 11:10:54 UTC+0530 2022

Product: BACKHOE LOADER
Model: 432F BACKHOE LOADER PXR
Configuration: 432F Backhoe Loader Side Shift PXR00001-UP (MACHINE) POWERED BY C4.4 Engine

Operation and Maintenance Manual
428F, 432F, 434F and 444F Backhoe Loaders
Media Number -SEBU8716-03 **Publication Date -01/10/2013** **Date Updated -09/10/2013**

i01920076

Bucket Cutting Edges - Inspect/Replace

SMCS - 6801-510; 6801-040

WARNING

Personal injury or death can result from bucket falling.

Block the bucket before changing bucket cutting edges.

1. Raise the bucket. Place a block under the bucket.
2. Lower the bucket to the blocking.

   Do not block up the bucket too high. Block up the bucket so that the bucket is high enough to remove the cutting edges and the end bits.
3. Remove the bolts. Remove the cutting edge and the end bits.
4. Clean the contact surfaces.
5. Use the opposite side of the cutting edge, if this side is not worn.
6. Install a new cutting edge, if both edges are worn.
7. Install the bolts. Tighten the bolts to the specified torque.
8. Raise the bucket. Remove the blocks.
9. Lower the bucket to the ground.

10. After a few hours of operation, check the bolts for proper torque.

Copyright 1993 - 2022 Caterpillar Inc.
All Rights Reserved.
Private Network For SIS Licensees.

This is the sample of the manual

Click on the download link for complete manual

Download Link